Инструкция для USB тестера KEWEISI KWS-MX18

AMPERTOK
AMPERTOK
AMPERTOK

USB Tester KWS-MX18 manual

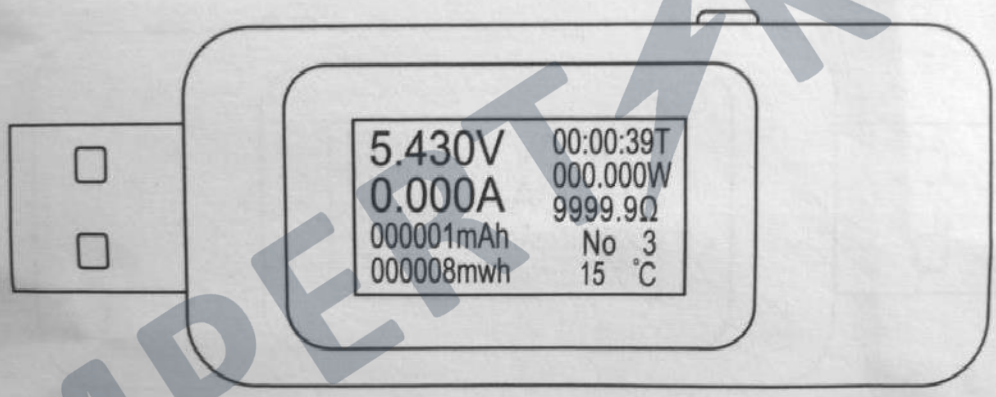

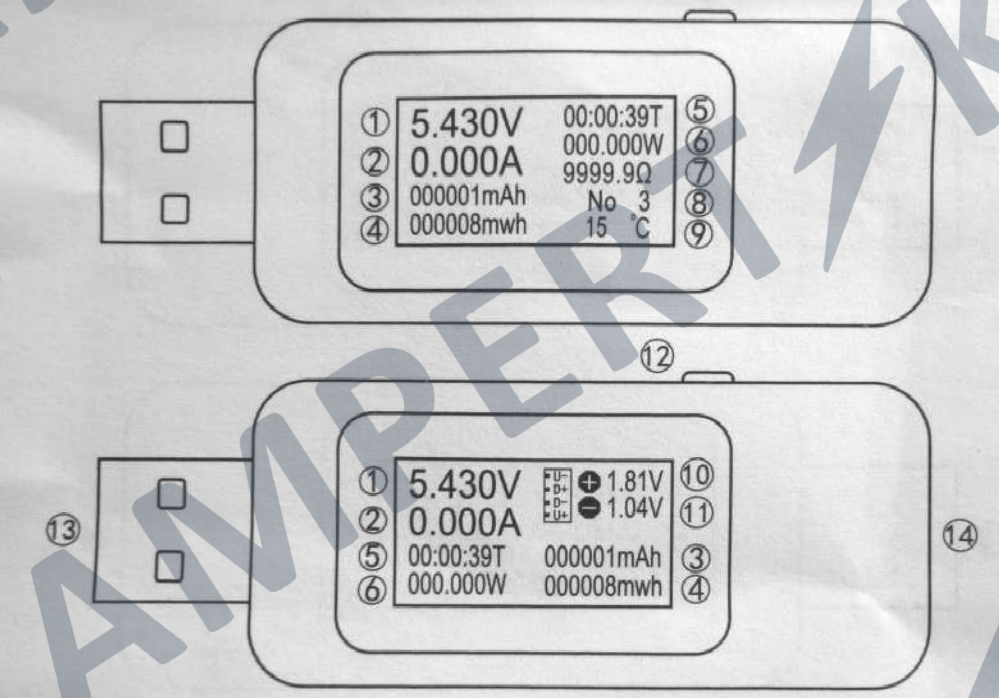

Product Parameters

1. Voltage: 4-30V
2. Current: 0-5.1A
3. Electricity: 0-999999mAh
4. Energy: 0-999999mWh
5. Timing: 0-99hours
6. Power: 0-150W
7. Charging resistance: 0-999.9Ω
8. Grouping: Group 1-9
9. Internal temperature: 0-80℃
10. Positive voltage: 0-10V
11. Negative voltage: 0-10V
12. Function button
13. Input USB
14. Output USB

Functional Instructions

1. Click the button to view the charging data saved in Group 1-9.
2. Press the button for 3 seconds to delete the charging data saved in one group.
3. Double-click the button to change the display page.
4. Hold the button and charge to enter the voltage calibration. e.g. when display is ($\underset{+000}{5.526V}\rightarrow$), double click the button again to display ($\underset{+000}{5.526V}\uparrow$), then click the button again to increase the voltage. Double click the button again to display ($\underset{+000}{5.526V}\downarrow$), then click the button again to reduce the voltage. Double click the button again to display ($\underset{+000}{5.526V}\rightarrow$), then click the button again to display "Current Calibration !" Then, the system will calibrate current automatically . After the calibration is completed, it will return to the main function page.

AMPERTK